

# Wireless Door Chime

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Wireless Door Chime helps ensure you will never miss visitors or deliveries while cleaning, doing laundry, or gardening. Its distinctive chimes, a bird and a doorbell, make it easy for you to tell whether the visitor or delivery person is at the front or rear door. Or, you can turn it off so you will not be disturbed. The wireless door chime is also ideal for freight doors, will-call counters, and security doors.

The system consists of two transmitters plus a receiver to mount on a wall or take with you when you're working around the house or in the yard. There is no wiring — not even an AC outlet.

To monitor your door chime from anywhere in your home or yard, you can add extra receivers, available by special order from your local RadioShack store.

## FCC STATEMENT

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## INSTALLING BATTERIES

 
Your wireless door chime requires two AAA batteries (not supplied) in each transmitter and two AA batteries (not supplied) in the receiver. For the best performance and longest life, we recommend RadioShack alkaline batteries.

### Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

### Installing the Transmitters' Batteries


1. Push the latch of the transmitter's battery compartment door down and lift open the door.
2. Install two AAA batteries as indicated by the polarity symbols (+ and -) marked inside the compartment.
3. Replace the compartment door.
4. Repeat Steps 1–3 for the other transmitter.

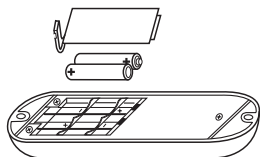

If a transmitter's indicator dims, replace its batteries.

### Installing the Receiver's Batteries

 1. Slide off the receiver's battery compartment door in the direction of the arrow.
2. Install two AA batteries as indicated by the polarity symbols (+ and -) marked inside the compartment.
3. Replace the compartment door.

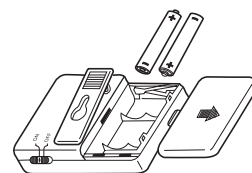

If the receiver's chime sound weakens, replace its batteries.

## INSTALLATION

### Selecting Mounting Locations for the Transmitters

 
The door chime has two transmitters, one for the front and one for the rear door. Select a location for each transmitter where:

- The mounting surface will hold the supplied screw anchors.
- Visitors and delivery people can easily see and reach it.

**Note:** The transmitters might not operate properly if mounted directly on metal surfaces. For the best results, place a small, thin non-metallic pad beneath each transmitter.

### Mounting the Transmitters


1. Using the transmitter as a template, mark the positions of the two screw holes at the selected mounting location.
2. Drill two 1/4-inch holes in the marked positions.
3. Hammer the supplied screw anchors into the holes.
4. Place the A transmitter (labeled **CODE A** on the back) with its indicator above the button and with the holes in its case aligned with the screw anchors.
5. Insert the supplied screws through the holes in the A transmitter's case, and tighten the screws.
6. Repeat Steps 1–5 for the B transmitter (labeled **CODE B** on the back).

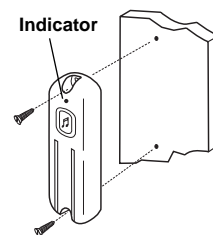

## Mounting the Receiver

You can mount the receiver in a convenient place in your home or business, or you can use the clip to attach it to your belt or pocket when you are working outside. Follow these steps to mount the receiver:

 1. Drive a screw or nail (not supplied) with a head that fits the receiver's keyhole slot into the wall at the desired location.
2. Place the clip's keyhole slot over the screw's head and slide the receiver down to latch onto the screw.

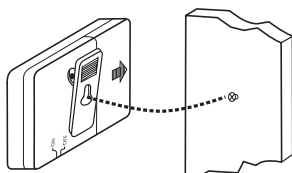

## Using the Receiver's Clip as a Stand

You can use the receiver's clip as a stand to position the receiver on any flat surface. Simply hold the receiver upright, press in the top of its clip, and shake it. The wire support falls into the notch on the bottom of the clip.

## OPERATION

Slide **ON/OFF** on the receiver to **ON**.

- When a visitor or delivery person pushes transmitter A's button, the transmitter's LED indicator lights and the receiver makes a bird sound.
- When a visitor or delivery person pushes transmitter B's button, the transmitter's LED indicator lights and the receiver makes a doorbell sound.

If you do not want the chime to sound, slide **ON/OFF** on the receiver to **OFF**.

## CARE

Keep the receiver dry; if it gets wet, wipe it dry immediately. Use and store the receiver only in normal temperature environments. Handle the receiver carefully; do not drop it. Keep the receiver away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the door chime's internal components can cause a malfunction and might invalidate its warranty. If your door chime is not performing as it should, take it to your local RadioShack store for assistance.

### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

12/99